HXL 04.02 - H.I.D. Replacement - Read before starting installation!

WARNING! - Consult an electrician If you are unsure of any of the following instructions. Risk of fire – Supply wires must be rated 90°C or greater.

Risk of death – Disconnect power at fuse or breaker panel before attempting any electrical work.

Installation:

- Verify that there is no power on the circuit
- Remove existing fixture for recycling
- Locate ballast compartment and disconnect ballast/starter/capacitor from line inputs and fixture.
- Ensure ground connection (green or bare wire) is secured to fixture.
- Connect incoming neutral wire (common) to LED fixture common input as per diagram.
- Connect incoming line wire (hot) to LED fixture line input as per diagram.
- Close ballast box.
- Restore power and test.







